


IRN-20 pendant microphone transmitter

To turn on the IRN-20 press and hold the on button until the status indicator lights.
Similarly to turn off or mute the IRN-20 press and hold the on button until the indicator goes out.

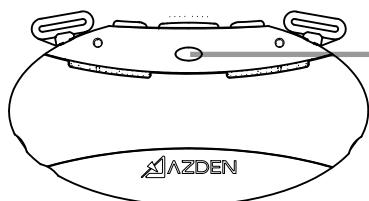

status indicator

Green = on

Alternating red/green = recharge soon

Red = charging

Orange = charged



Adjusting the neck strap

Correct positioning of a pendant transmitter is important,

The IRN-20 pendant should be worn so that the emitter faces forwards and the unit rests about 150mm below the mouth -this means it should sit just below your collarbone.

Both straps can be easily adjusted as required, using the sliders.

The two parts of the neck clasp may be pushed together or pulled apart either directly or by sliding.

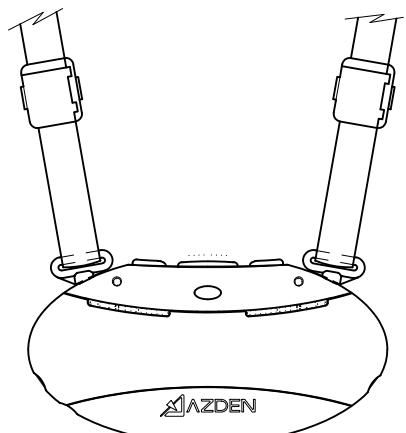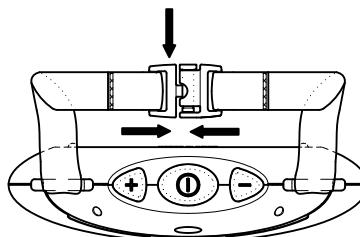

Indicator LED

The Indicator LED show green,red or orange depending on the status or mode off the IRN-20

In normal use:

Solid green - the IRN-20 is on and working.

Alternating green/red - the battery is low and the unit needs to be recharged.

No indication - the unit is switched off.

When charging:

Solid red - the IRN-20 is charging normally and is turned off.

Flashing red - there is a problem with charging - refer to fault finding appendix.


Solid orange - the IRN-20 is fully charged, it is turned off and the charger has switched to trickle charge.

Using the IRN-20 on external power

Connecting a charger automatically turns off the IRN-20 and starts charger it (red indicator).

During charging , a press of the ON/OFF button will suspnd charging and return the unit to ON (green indicator)- in this mode, although the battery needs to be fitted, the IRN-20 is now powered from the charger rather than the battery.

Using external power will preserve battery life when connected to an external sound source.

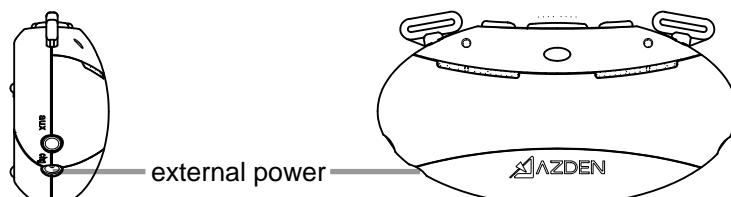

Changing the battery

To open battery compartment, press in the centre of the battery door with both thumbs and slide off. The battery door is treated with a clear anti-slip finish to reduce the tendency to move when worn.

Pull on ribbon tab to release battery.

Rechargeable battery:

1 x 2700mAH high capacity rechargeable AA battery - exposed end.

This battery is fitted with is exposed metal end against the spring.

Position the battery on top of the ribbontab for easy removal next time.


Technical Note - when a battery is first inserted. the IRN-20 will automatically test the battery to make sure it has enough charge.

The indicator will show orange for 5 secs while it is testing, followed by green or red for 1sec.

Green - the battery has enough charge.

Red - the battery needs to be recharged.

A flickering indicator or no indicator - the battery has no charge and needs to be recharged or replaced.

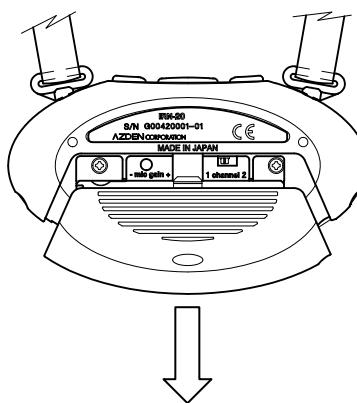

Dual directional microphones

The IRN-20 uses tow separated microphones(Left and Right)to provide a constant transmitted voice level as the user's head is turned from side to side.

The optimized dual microphone design also provides ideal pick up of the user's voice and rejects unwanted sounds in all other directions.

This means that you don't get variation of volume as the speaker moves head from side to side.

Microphone gain settings

The IRN-20 microphone gain control is factory set and will not need adjusting.

Remote volume control feature - for use with IRR-40/40P
When used with an IRR-40/40P, the IRN-20 can be used to remotely adjust the channel volume.





The range of remote volume adjust is +/-15dB and allows the user to temporarily adjust the volume of their voice from the IRR-40/40P.

A short press of the + or - button on the top of the transmitter will increase or decrease the current volume by 1 dB.

Holding down the + or - button will change the volume at the rate of 4dB per second.

To reset the volume to the default manual setting on the IRR-40/40P unit, press both the + and - buttons simultaneously.

The IRR-40/40P volume will reset itself to the manual setting when the IRR-40 is turned off.

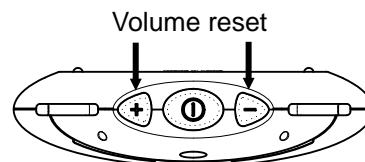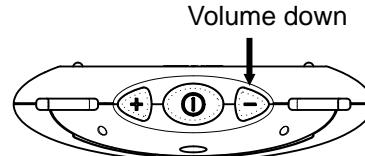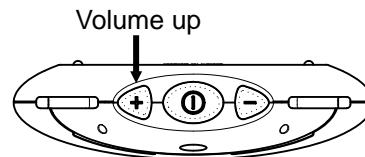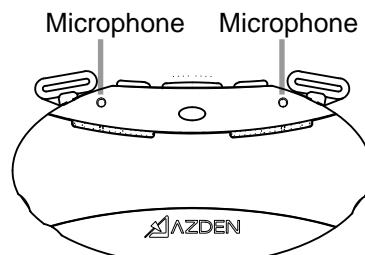

Note - the remote volume control function will only work with new IRR-40/40P models. Compatibility with the remote control feature is indicated by the xx suffix.

IRN-20 Specifications

Sub-carrier frequencies	2.06MHz & 2.56MHz switchable	Ext power input jack	3.5mm
Modulation	FM	Battery type	"AA" Battery (1.5V x 1)
Microphone type	Uni-directional electret x 2	Size	95 (H) x 49 (W) x 26 (D)mm
Frequency response	120-10kHz	Weight	79g w/battery
Ext Mic input jack	3.5mm		